


REINER

Operating Instructions

jetStamp 790

Mobile electronic hand stamp
with changeable accumulators
and flexible selection of imprints

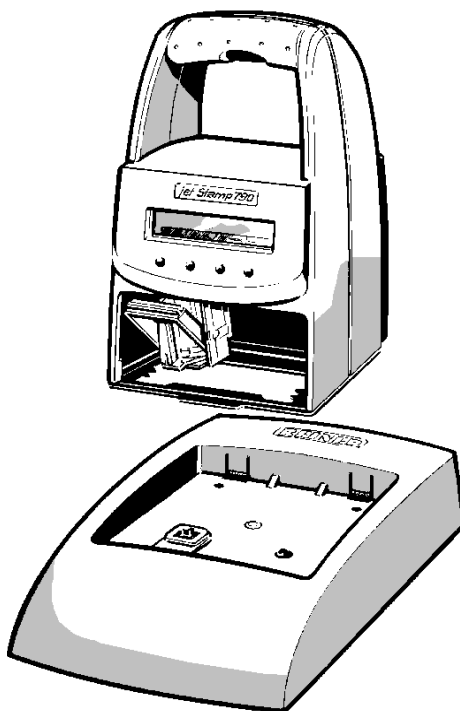

© 2003 Ernst Reiner GmbH & Co. KG

All rights reserved. Translations, reprints, or any other form of reproduction of this manual, even in part and regardless of form, require prior written permission.

This manual is subject to change without prior notice.

This manual has been compiled with the utmost care and diligence, however we cannot assume any form of liability for errors or omissions or for damage resulting from them.

Table of contents

Control elements	4
Commissioning	5
Display zones and button functions	8
Imprint selection	9
Stored imprints	10
Customer-specific impressions	12
Setting time and date	13
Different settings of the Numberer	14
Setting pre-texts	16
Stamping	17
Changing the ink cartridge	18
Setup module	20
Description of the Setup module	21
Troubleshooting	25
Reset button	25
Safety guidelines for accumulators	26
Guidelines on commissioning and operating accumulators	27
Technical data	28
Certifications	29



Note

= Information / Notice




Warning

= Caution



= Safety hint

Control elements

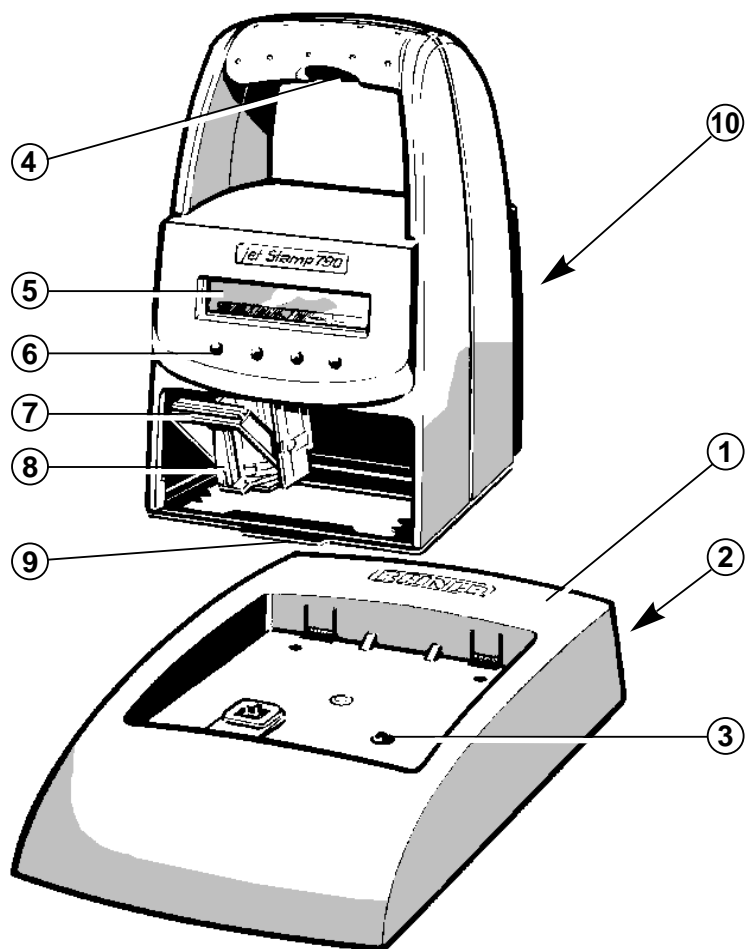

- 1 = Charging station with mains unit
- 2 = Socket for power supply (reverse side)
- 3 = Green charge-indicator lamp
- 4 = Trigger
- 5 = Display
- 6 = Buttons
- 7 = Locking rail
- 8 = Ink cartridge
- 9 = Notch
- 10 = Accumulator case (rear side)

Commissioning

Unpack equipment

- ▶ Connect plug power adaptor provided to base station and connect to mains voltage

Note: Only use original REINER components!


Insert accumulators


- ▶ Remove cover on back: To do this push locking latch (1) up and remove cover
- ▶ Insert accumulators, according to correct polarity markings!
- ▶ Attach stop levers of cover to the openings (2) of the equipment and close the accumulator case again



Place *jetStamp* in the charging station and load accumulators


Observe the following guidelines:

- Hook *jetStamp* to the notch (9) and place it in the charging station
- Fully charge the accumulators to begin with. We recommend charging the accumulators for around 16 hours continuously, e.g. overnight, for the first time. After this, between four and six hours is required for charging.
- Accumulators charge status is indicated in the display in the top right hand corner by the symbol 
- While charging process the green charge status indicator (3) lights up in the charging station
- Do not expose *jetStamp* to direct sunlight (For ambient temperature see page 28, 'Technical data')

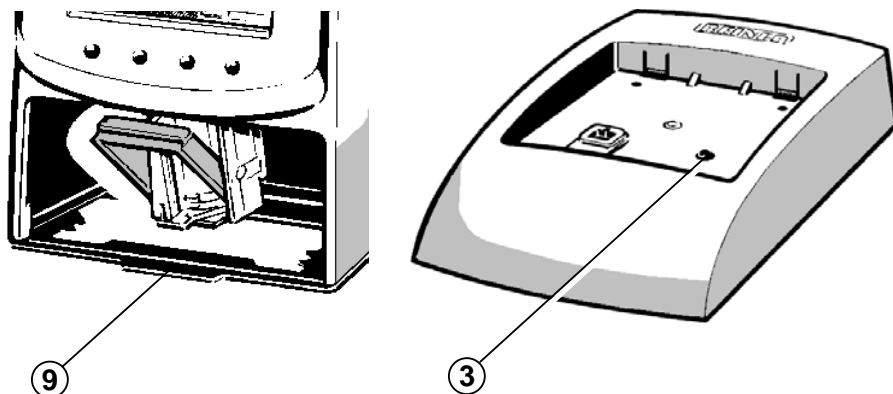


Insert ink cartridge

- ▶ When necessary press repeatedly [**MODE**] until menu item "INKJET" is displayed on the lower display line
- ▶ Press [**INKJET**] : The print carriage now automatically moves to the middle of the equipment for easier handling
- ▶ Remove ink cartridge from packaging and remove protective film from the ink cartridge
- ▶ Hold the small felt plate provided with the felt-side on the ink cartridge nozzles for about 2 seconds until there is some ink on the felt

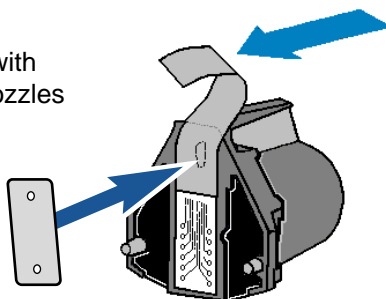

- ▶ Push the locking rail (7) back on the print carriage and insert the ink cartridge with the handle strip (8) in the print carriage pointing to the operator
- ▶ Pull the locking rail forward again (7) until it engages
- ▶ Press [**INKJET**] : The print carriage moves back to its original position

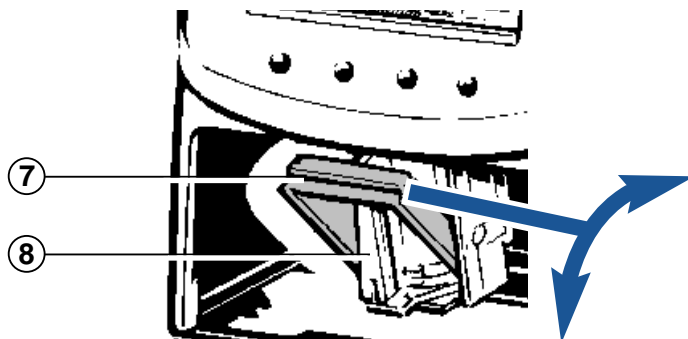


Display zones and button functions

The display is divided into three zones:

- A** The top line is the **status line**
On the left is the number of the impression selected (P:01 ... P:29) .
To the right of that, if the impression includes numbering, is the repetition setting (e.g. R:02/02) .
At the right of the top line is the battery symbol, showing the state of charge of the battery.
- B** The middle of the display shows the **imprint** currently selected on one or two lines
- C** The bottom line of the display contains the **menu bar**
The menu items and commands displayed here can be selected by pressing the appropriate button.
- D** Below the display there are **four buttons**
Each button is associated with the menu field in the display immediately above it, i.e. a button function always depends on the menu or command displayed.

Example of a display:

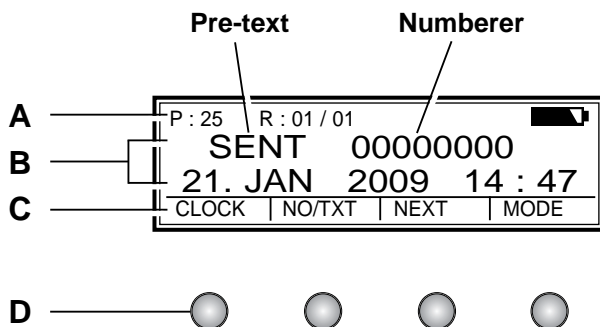

Imprint selection

A total of 25 different standard imprints are stored (see pages 10 / 11)
These contain the individual printing fields 'Pre-text' 'Numberer'
'Date' and 'Time'.

Any 'Pre-text' can be selected from 12 standard texts, or it can be switched off (see page 16)

The imprints are numbered 'P:01' to 'P:25'.

The number of the imprint currently selected is shown at the top left of the display.

'P:26' ... 'P:29' are reserved for customer-specific imprints
(see page 12)

The required imprint can be selected in one of two ways, which are described below:

- a) Select the required imprint by pressing [**NEXT**]
Only those imprints can be selected that are marked 'ON'
in the Setup Menu (see menu item 'SET STAMP PICT' page 22)



Note

The display mode can be changed by [**MODE**]
Press this button, if necessary repeatedly, until
the menu item "NEXT" appears in the menu bar.

- b) Select an imprint using the **SETUP** menu.
All available imprints can be selected, including those marked 'OFF'
in the Setup menu (see menu item 'SET STAMP PICTURE' page 22)

Stored imprints

Imprints P : 01 ... P : 04 = Pre-text + Date

P : 01	SENT	21. JAN	2009	
CLOCK NO/TXT NEXT MODE				

P : 02	SENT	21. 01.	2009	
CLOCK NO/TXT NEXT MODE				

P : 03	SENT	2009 - 01 - 21	
CLOCK NO/TXT NEXT MODE			

P : 04	SENT	JAN	21. 2009	
CLOCK NO/TXT NEXT MODE				

Imprints P : 05 ... P : 07 = Pre-text + Numberer

P : 05	R : 01 / 01	SENT	00000000	
NO/TXT NEXT MODE				

P : 06	R : 01 / 01	SENT	0 0 0 0 0 0 0 0	
NO/TXT NEXT MODE				

P : 07	R : 01 / 01	SENT	00000000	
NO/TXT NEXT MODE				

Imprints P : 08 ... P : 10 = Pre-text + Numbers

P : 08	SENT	0000000000	
NO/TXT NEXT MODE			

P : 09	SENT	0 0 0 0 0 0 0 0	
NO/TXT NEXT MODE			


P : 10	SENT	000000000000	
NO/TXT NEXT MODE			





Note


On selection of one of the imprints P:08 ... P:10 ,
the setting of the Numberer is automatically cleared

Imprints P : 11 ... P : 14 = Numberer + Pre-text + Date

P : 11	R : 01 / 01	
00000000		
SENT 21. JAN 2009		
CLOCK	NO/TXT	NEXT MODE


P : 12	R : 01 / 01	
00000000		
SENT 21. 01. 2009		
CLOCK	NO/TXT	NEXT MODE


P : 13	R : 01 / 01	
00000000		
SENT 2009 - 01 - 21		
CLOCK	NO/TXT	NEXT MODE


P : 14	R : 01 / 01	
00000000		
SENT JAN 21. 2009		
CLOCK	NO/TXT	NEXT MODE

Imprints P : 15 ... P : 19 = Pre-text + Date + Time

P : 15	
SENT	
21. JAN 2009 14 : 47	
CLOCK	NO/TXT NEXT MODE


P : 16	
SENT	
21. 01. 2009 14 : 47	
CLOCK	NO/TXT NEXT MODE


P : 17	
SENT	
2009 - 01 - 21 14 : 47	
CLOCK	NO/TXT NEXT MODE


P : 18	
SENT	
JAN 21. 2009 14 : 47	
CLOCK	NO/TXT NEXT MODE


P : 19	
SENT	
JAN 21. 2009 PM 02 : 47	
CLOCK	NO/TXT NEXT MODE


Imprints P : 20 ... P : 25 = Pre-text + Numberer + Date + Time


P : 20	R : 01 / 01	
SENT 00000000		
21. JAN 2009 14 : 47		
CLOCK	NO/TXT	NEXT MODE

P : 21	R : 01 / 01	
SENT 00000000		
21. 01. 2009 14 : 47		
CLOCK	NO/TXT	NEXT MODE

P : 22	R : 01 / 01	
SENT 00000000		
2009 - 01 - 21 14 : 47		
CLOCK	NO/TXT	NEXT MODE

P : 23	R : 01 / 01	
SENT 00000000		
JAN 21. 2009 14 : 47		
CLOCK	NO/TXT	NEXT MODE

P : 24	R : 01 / 01	
SENT 00000000		
JAN 21. 2009 PM 02 : 47		
CLOCK	NO/TXT	NEXT MODE

P : 25	R : 01 / 01	
SENT 00000000		
21. JAN 2009 14 : 47		
CLOCK	NO/TXT	NEXT MODE

Customer - specific imprints

Imprints P : 26 ... P : 29 = customer - specific

P : 26 ... P : 29		
<div style="border-bottom: 1px solid black; height: 1.2em; width: 100%;"></div> <div style="border-bottom: 1px solid black; height: 1.2em; width: 100%;"></div>		
NO/TXT	NEXT	MODE

P:26 ... P:29 are intended for individual customer-specific imprints. Each imprint can have two lines with up to 20 characters in each.

Characters can be entered as follows:

- ▶ Select the required imprint (P:26 ... P:29)
- ▶ Press [**NO/TXT**] :
 The top line of the display shows 'INPUT - MODI TEXT 01'
 MODI TEXT 01 = first entry block (10 characters) in the top line
 MODI TEXT 02 = second entry block (10 characters) in the top line
 MODI TEXT 03 = first entry block (10 characters) in the bottom line
 MODI TEXT 04 = second entry block (10 char.) in the bottom line
- ▶ To change from one entry block to the next, press [**NEXT**]
- ▶ Using [**VARY**], a block is selected for entry or changing, you can then enter characters with [**DEC**] or [**INC**]

The following characters are available:

0 ... 9 A ... Z Ç Ä Å É Æ Ö Ü £ Ø Ñ Á À ¥
 Ë È Ó Ú € Í \$ & * + , - . / : @

- ▶ [**RIGHT**] is used to select the next entry position
- ▶ Press [**RETURN**] to go back to the previous menu



Note

The customer-specific imprints P:26 ... P:29 have the fields *Date 2*, *Time 2*, *Numberer 2* and *Pre-text* assigned to them. When using a PC-Set, the appropriate fields can be individually entered in these imprints, and then selected for data entry.
 If you have any questions, please contact your dealer.

Setting time and date

To set the time and date, an impression must first be selected that contains the date, or date and time as appropriate.

- ▶ First select an impression that contains the date, or date and time as appropriate (see also pages 10 and 11)
- ▶ Press [**MODE**] if necessary repeatedly, until the menu item "CLOCK" is displayed
- ▶ Press [**CLOCK**] to select the required menu item
The display shows "INPUT - TIME 1" * and below it you will see the time currently set



Note

This menu may be protected by a password.
In that case the correct password must first be entered.

- ▶ Press [**VARY**] to select the minutes figures and set the minutes by pressing [**INC**]
- ▶ Press [**NEXT**] to select the hours figures and set the hours by pressing [**INC**]
- ▶ Press [**RETURN**] and then [**NEXT**] to change to the date display (display shows "INPUT - DATE 1" *)
- ▶ Press [**VARY**] to select the year figures and set the year by pressing [**INC**]
- ▶ Press [**NEXT**] to change to the month display and use [**INC**] to set the month
- ▶ Press [**NEXT**] to change to the days figures and use [**INC**] to change the setting
- ▶ Press [**RETURN**] if necessary twice, to exit the menu.
The impression selected will be displayed, and the stamp is ready for use

* When using a customer-specific imprint (P:26 ... P:29) ,
you can change to "INPUT - TIME 2" or "INPUT - DATE 2"
at this point by pressing [**NEXT**]

Different settings of the Numberer

The numbering device is used for the successive numbering of forms. Numbering can be increasing or decreasing. Further, various functions of the numberer can be coupled together, e.g. repetition, zeroing, counting, activation of a minimum or maximum value, advance skip, etc. Before the numberer can be set, an impression, which uses the numberer or figures, must be selected (see pages 10 / 11)

Selecting the Numberer:

- ▶ Press the [**MODE**] button, if necessary repeatedly, until the menu item "NO / TXT" appears in the menu bar. Pressing [**NO / TXT**] then activates the menu.



This menu may be protected by a password. In that case the correct password must first be entered.

Note

Depending on the imprint selected, the following functions may be available. By pressing [**NEXT**], you can scroll through them.

- INPUT - REPETITION = for setting the repetition factor
- INPUT - NUMBERER 1 or INPUT - NUMBERER 2 * = for entering the starting point of the numberer
- INPUT - PRE TEXT = for selecting the pre-text
- INPUT - NUMBER 1 or INPUT - NUMBER 2 * = for setting figures

* These functions are only available with a customer-specific imprint (P:26 ... P:29), which has been prepared using PC-Set

Setting of the repetition factor (INPUT - REPETITION):

- ▶ Press [**NEXT**] if necessary repeatedly, until the display shows "INPUT - REPETITION"
- ▶ Press [**VARY**] to select the units position of the entry
- ▶ Set the units position by pressing [**INC**] to increase the setting, or press [**DEC**] to reduce it
- ▶ By pressing the [**LEFT**] button, you can move to the tens position, which can also be set with [**INC**] or [**DEC**]
- ▶ Press [**RETURN**] to exit the setting

Numberer - setting starting point or figures :

- ▶ Press [**NEXT**] if necessary repeatedly, until the display shows
"INPUT - NUMBERER 1" "INPUT - NUMBER 1" or
INPUT - NUMBERER 2 * INPUT - NUMBER 2 *
 - * Only available with a customer-specific impression (P:26 ... P:29),
which has been prepared using PC-Set
- ▶ Press [**VARY**] to select the first position of the entry
- ▶ Set this digit by using [**INC**] to increase, or [**DEC**] to decrease it
- ▶ With the [**LEFT**] and [**RIGHT**] buttons, you can move to the other positions. They can be set using [**INC**] and [**DEC**]
- ▶ To exit the setting press [**RETURN**]
- ▶ Press [**RETURN**] again to exit the menu. The selected impression is displayed again, and *jetStamp* is ready for use

Additional functions of the Numberer

Increasing and / or decreasing numbering between two limits.

Press [**MODE**] if necessary repeatedly, until the following functions appear in the menu bar:

- [**N1 MAX ◀**] = upper limit is activated (pressing this button again displays the upper limit)
- [**N1 MAX**] = upper limit is de-activated
- [**N1 MIN ◀**] = lower limit is activated (pressing this button again displays the lower limit)
- [**N1 MIN**] = lower limit is de-activated
- [**N1 CLR**] = all limits de-activated
- [**COUNT**] = increases or decreases the counter reading by one step
- [**CLEAR**] = sets the counter back to the limit

For further notes on additional functions of the Numberer see page 23

Setting pre-texts

There are 12 different standard pre-texts stored in the stamp for each language. The set pre-text (or blanks if pre-text is switched off) is printed with all standard imprints which include a pre-text. The following standard pre-texts are stored :

RECVD	INU.	DRAFT	FAX
SENT	ORDER	PAID	ORIG
FILE	ENT.D	RECPT	REG.D
_ _ _ _ _ (= pre-text switched off)			

To select a pre-text proceed as follows:

- ▶ Press [**MODE**] if necessary repeatedly, until "NO / TXT" appears in the menu bar
- ▶ Press [**NO / TXT**] to select this menu item



Note

This menu may be protected by a password. In that case the correct password must first be entered.
If you need more information, please contact your dealer.

- ▶ Depending on the imprint selected, the display will now offer entry of the numberer (= INPUT - NUMBERER 1), the repetition factor (= INPUT - REPETITION) or the pre-text (= INPUT - PRE TEXT)
- ▶ Press [**NEXT**] if necessary repeatedly, until the display shows "INPUT - PRE TEXT"
- ▶ Pressing the [**VARY**] button will cause the present pre-text to be shown blinking
- ▶ Press the [**NEXT**] button, if necessary repeatedly, until the required pre-text appears
- ▶ Press [**RETURN**] to accept this pre-text
- ▶ Press [**RETURN**] again to exit the menu. The selected imprint will be displayed again, and the stamp is ready for use

Stamping

Stamping will be triggered by pressing the red trigger, which is located in the grip.

Depending on the selected imprint, the imprint will have one or two lines. The position of the two lines can be seen in the illustration below.



Note


- Stamping may be protected by a password. In that case the correct password must first be entered. To block stamping again, press [**MODE**] repeatedly until 'CLOSE' appears in the menu bar. Pressing [**CLOSE**] will block stamping.
- Avoid the dry up of the nozzles of the ink cartridge: With longer breaks, *jetStamp* should be placed in the charging station



The ink in the ink cartridge is harmful!
Never hold *jetStamp* against a person's face!

Stamping is not possible under the following circumstances:

- When the accumulators are discharged, the display shows "EMPTY BATTERY NO IMPRINT POSSIBLE"
- In Setup or Setting mode
- When *jetStamp* is in the charging station
- Printing is blocked - the display shows "IMPRINT BLOCKED" : The blockade can be released by pressing [**QUIT**] (see also page 24, menu item 'BLOCK IMPRINT')

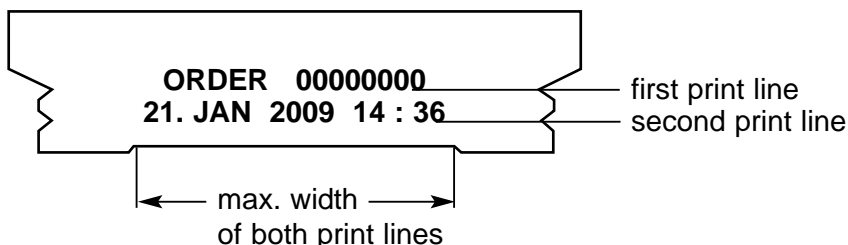

Changing the ink cartridge



Note

- The change of the ink cartridge may be necessary if the imprint is incomplete or if dots are missing
- For an optimal print performance the ink cartridge should be changed at least all six months
- The ink cartridge is ready to print that means there is no preparation necessary before using it
- Replacement ink cartridges are available with the order number 801 307 - 000 on REINER stock




Warning


The ink in the ink cartridge is harmful. Never swallow it! Always keep the ink cartridge out of the reach of children!

Removing a used ink cartridge:

- ▶ Press [**MODE**], if necessary repeatedly, until the menu item "INKJET" appears
- ▶ Press [**INKJET**]: The print carriage will go automatically to the centre of its travel to make handling easier
- ▶ Push the locking rail (7) back until it clicks into position, and then withdraw the ink cartridge forwards

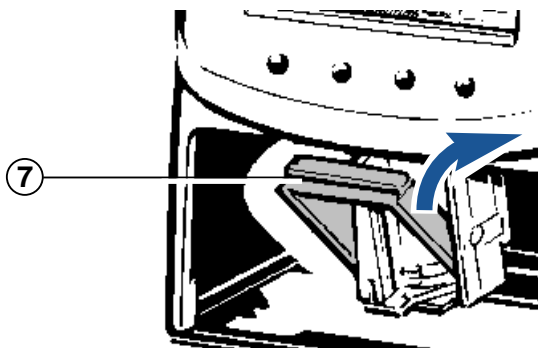


Dirt and dried up ink at the holder of the ink cartridge can be removed with a soft cleaning cloth moistened in spirit (see figure1)

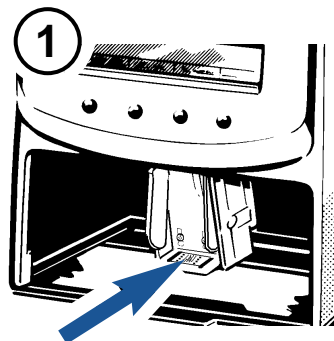

Insert the new ink cartridge:

- ▶ Take the ink cartridge from the packaging and remove the coloured protection film from the ink cartridge (see figure 2)
- ▶ Take the small felt plate and put the felt side to the nozzle plate of the ink cartridge for approx. two seconds until a little bit of ink is at the felt
- ▶ Put in the new ink cartridge into the ink cartridge holder

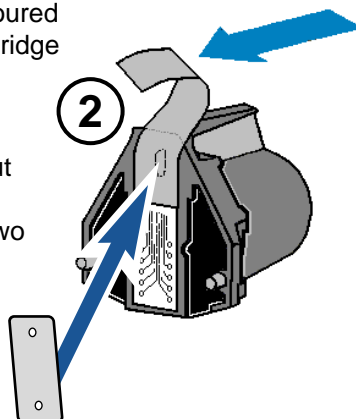

- ▶ Push the locking clip downward until it engages, by this means the ink cartridge will be locked (see figure 3)



Note

When *jetStamp* is in the charging station, a cleaning sequence for the ink cartridge can be activated by pressing [**CLEAN**]

If necessary, press [**MODE**] repeatedly until [**CLEAN**] appears in the menu bar.

Setup module

The Setup module contains the following two main menus:

SETTINGS: Enables comprehensive, extensive changes to settings to be carried out, influence the impression and the handling of the stamp.

UPDATE: In combination with the optional PC - Set, the program in *jetStamp* can be updated. In addition, the imprints P:26 ... P:29 can be individually replaced or modified.

Selection of the Setup module :

- ▶ Press [**MODE**], if necessary repeatedly, until "SETUP" appears in the menu bar
- ▶ With pressing [**SETUP**], the first main menu ' SETTINGS ' is displayed. With [**NEXT**] you can switch between the two menu items ' SETTINGS ' and ' UPDATE ' . Whichever is displayed can be selected by pressing [**CALL**]





Note

The Setup module may be protected by a password. In that case the correct password must first be entered. For further information, please contact your dealer


- ▶ By pressing [**NEXT**], you can scroll through the menu items (see also page 21). The value or status of the current item is always shown on the right of the display.
- ▶ Pressing [**VARY**] selects the displayed menu item, e.g. to change its value or status
- ▶ Numerical values can be increased by pressing [**INC**] or reduced by pressing [**DEC**] (decreasing)
- ▶ A status can be changed using [**OFF**] and [**ON**]
- ▶ Pressing [**RETURN**] accepts the value or status selected, and the display automatically shows the next menu item. Pressing [**RETURN**] again exits the Setup menu. The selected imprint is displayed, and *jetStamp* is ready for use


Description of the Setup module

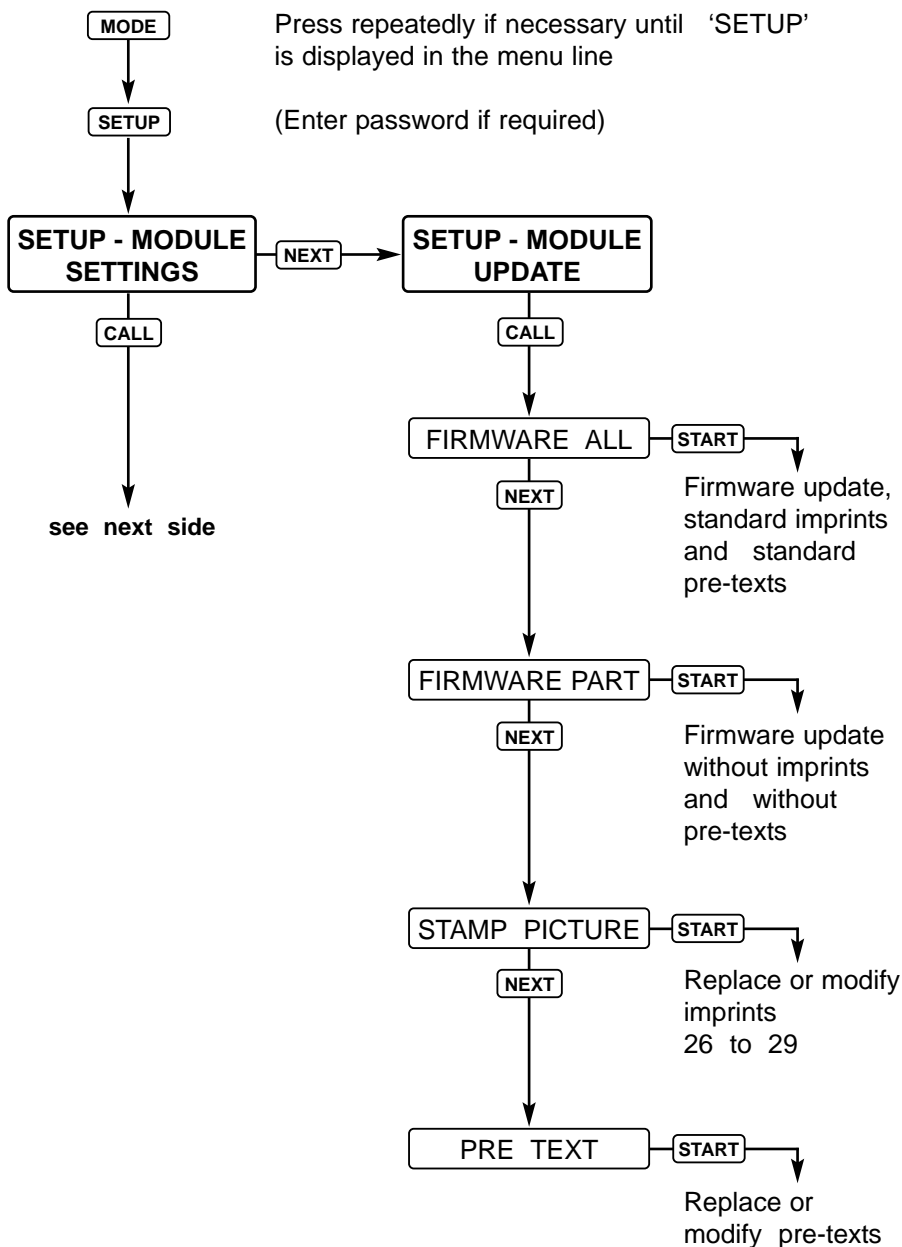

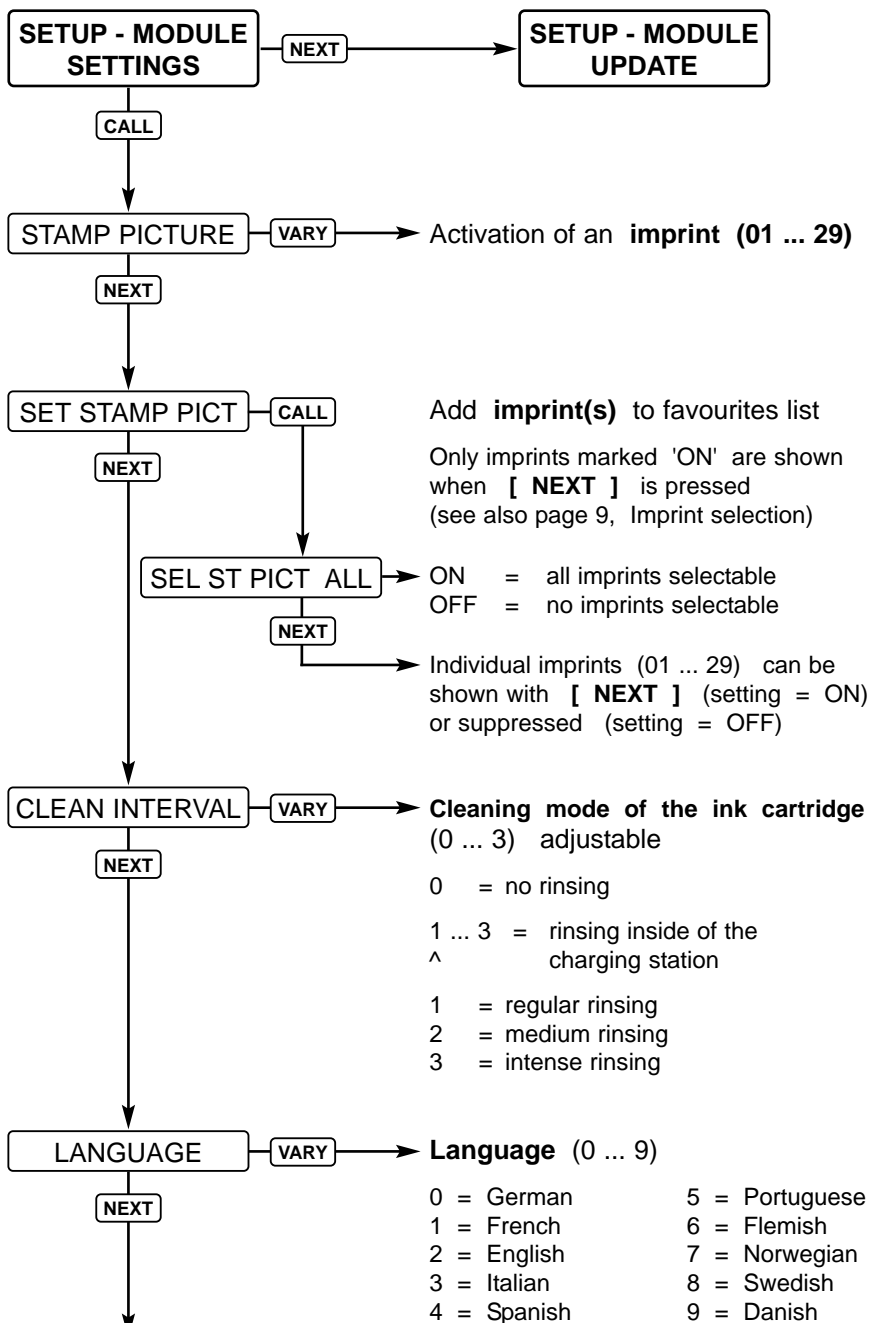

continuation see next page

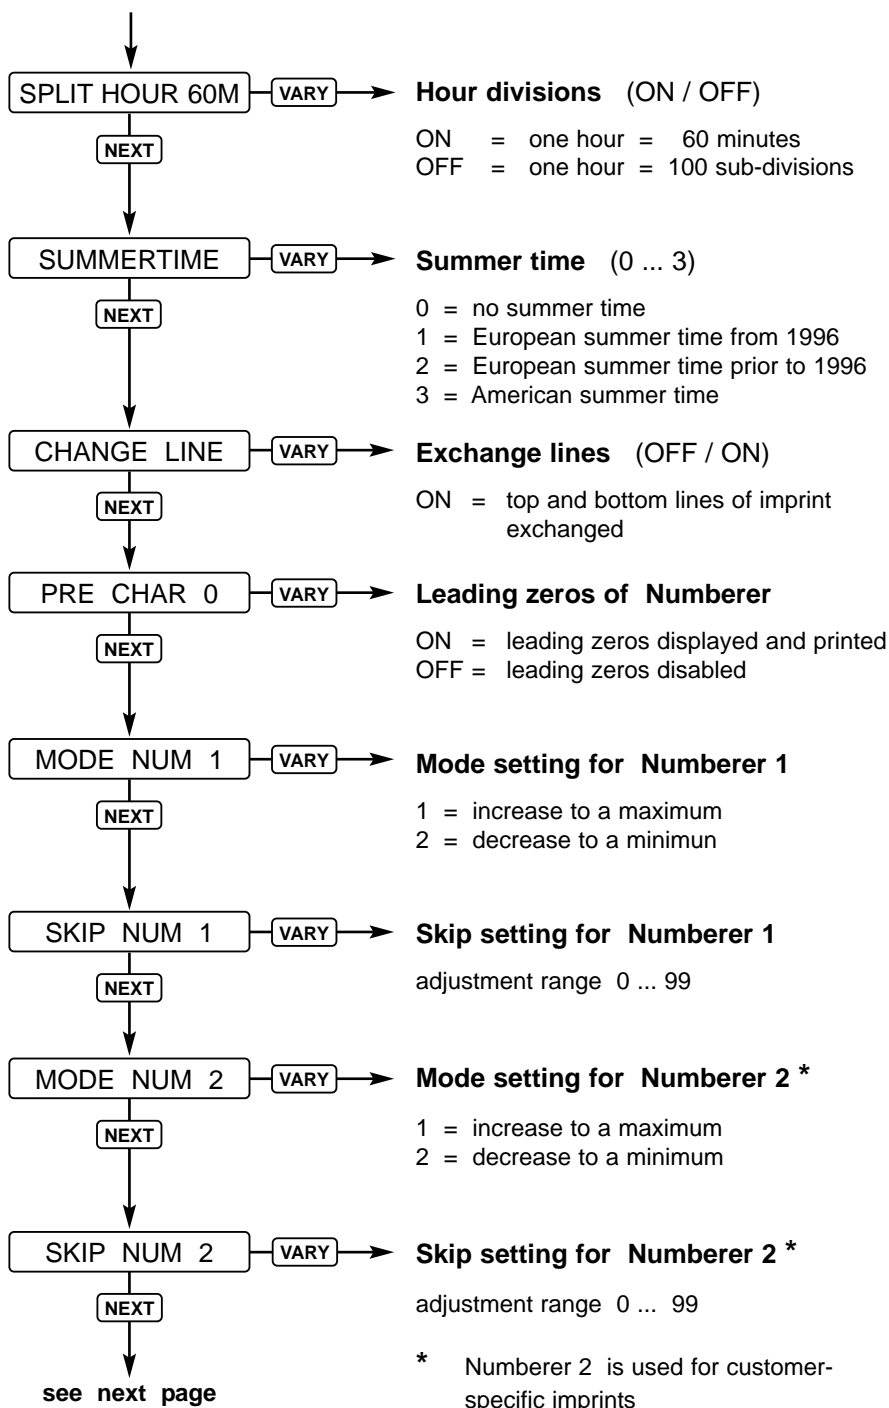

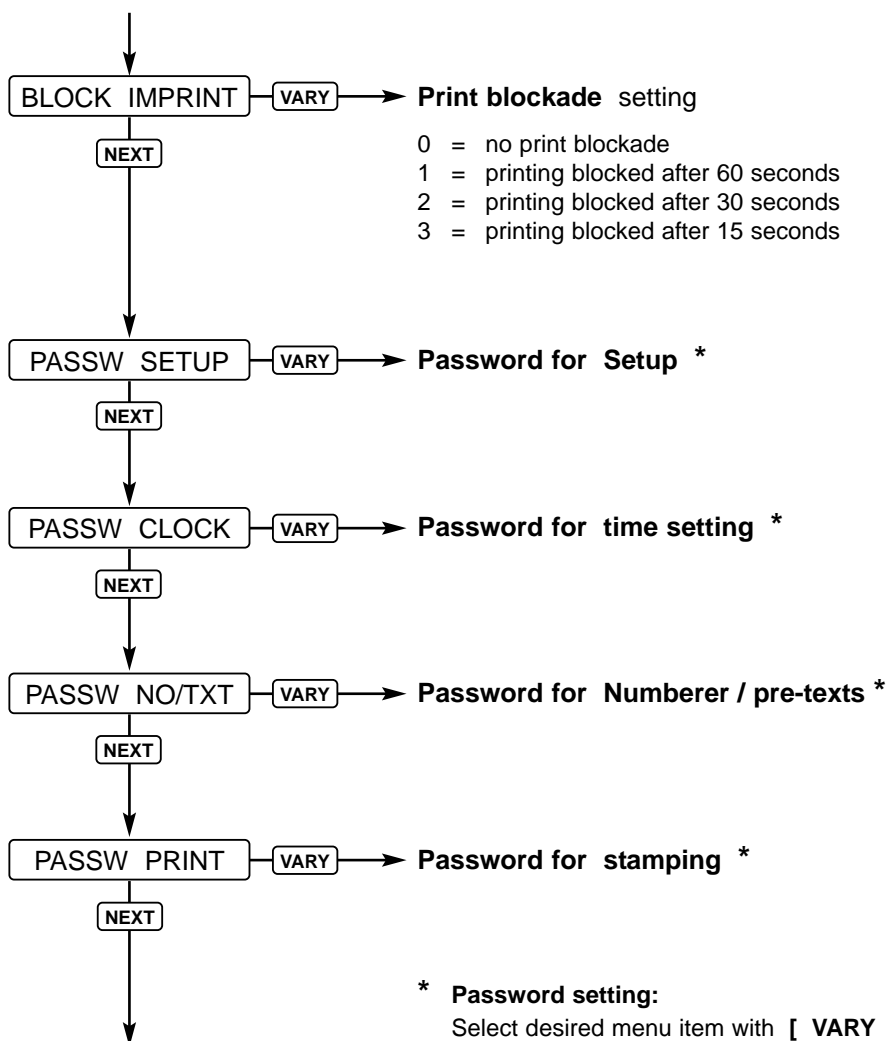

see page 20
STAMP PICTURE

*** Password setting:**
Select desired menu item with [VARY]
then activate with [ON] or
de-activate with [OFF],
press [RETURN] and enter
your chosen password.

Troubleshooting

Display	Cause	Recommendation
IMPRINT BLOCKED	Time allowed by 'Block Imprint' has expired, after that trigger has been pressed	Press [QUIT] : <i>jetStamp</i> is then ready for use again
WRONG STATION	Wrong charging station, <i>jetStamp</i> needs an intelligent charging station	Press [QUIT] : Error message disappears and previous display reappears
Error 04	Memory error	Press [QUIT]
Error 09	<ul style="list-style-type: none"> • Sensor or motor defective • Print carriage blockade 	Press [QUIT] and start stamping again

Reset button



Note

- If the Reset button is pressed, various settings are lost, e.g. date and time and the battery charge indication. *jetStamp* must then be placed in the charging station for about 3 hours to synchronise the state-of-charge indicator.
- If the accumulators have been discharged too far, the charging process may cause confused signs to appear in the display. Pressing the Reset button will cure this condition.
- To operate the Reset button, insert a straightened paper clip or similar object through the opening in the rear face of the stamp

Safety guidelines for accumulators

 
 


Note

**Batteries are likely to deteriorate.
For this reason a lifetime of more than 6 months
cannot be guaranteed**

- Only use rechargeable accumulators such as the AAA type Nickel Metal Hydride (NiMH) provided!
- The following products are recommended if replacements are required:
Panasonic AAA NiMH 800 mAh and
GP Batteries AAA NiMH 950 mAh
(typical capacitance current 200 mA maximum six hours)
- In principle only use accumulators of the same type (NiMH) and the same capacity
- Do not use other or normal (non-rechargeable) batteries! Other batteries may lead to operational failures or may damage the equipment. Damage may also be caused to the accumulator casing (dangerous). The manufacturer does not assume any liability in such cases.
- Pay attention to the polarity markings of the accumulators when inserting them! (see battery symbols in accumulator case)
- Pay attention that the contacts in the accumulator case do not come into contact with metallic or greasy components
- Do not immerse accumulators in water, nor throw them in fire
- Do not dispose of old, defective accumulators with normal household rubbish
- Accumulators become warm during charging, this is normal and not dangerous
- Only use with charging station provided!
Accumulators may become damaged with other chargers.

Guidelines on commissing and operating accumulators

- The charging of accumulators is electronically controlled. This ensures that the accumulator cells are charged in an optimal and sparing way.
- Fully charge the accumulators to begin with. We recommend charging the accumulators for around 16 hours continuously, e.g. overnight, for the first time. After this a maximum of six hours charging time is required (depending on battery capacity).
- After the first full charge the accumulators reach normal operating level. Although the green charge status indicator indicates that the accumulators are charged (green charge indicator display is off) in this initial phase it must be taken into account that normal stand-by times are lessened.
- New accumulators reach full capacity, while jetStamp is not on the charging station several times, until ' Empty BAT  ' is indicated on the display. After this the accumulators should be recharged again for about 16 hours.
- When removing the accumulators the display indicator is reset. Irrespective of the charge status of the accumulators an empty battery symbol  is always indicated on the display.
- Hints to the usage of ink cartridges with quickly drying ink: While the first ten minutes of the charging procedure of accumulators as well as the changing of the ink cartridge, the cleaning and rinsing process will not be realized. In that case the ink cartridge may dry up. During this time the ink cartridge should be placed in a safe storage container.

Technical data

Stamping time	approx. 0,7 seconds
Stamping cycle	> 2 seconds
Print capacity per ink cartridge	approx. 300.000 characters
Stand by time per accum. charge	6 days or 500 stampings
Time to charge accumulators	approx. 6 hours
Dimensions, <i>jetStamp</i> 790 only	(B x D x H in mm) 95 x 70 x 170
Dimensions, charging station only	(B x D x H in mm) 102 x 135 x 32
Height of <i>jetStamp</i> in charg. stat.	187 mm
Weight of <i>jetStamp</i> 790	approx. 490 g
Weight of charging station	approx. 430 g
Ambient temperature for operation	+ 8° C ... + 35° C (temperat. limits) down to - 8° C conditional
Temperature for transport and storage	- 20° C ... + 60° C (up to 48 hours)
Humidity for operation	30% ... 70% relative humidity
Humidity for transport and storage	10% ... 90% relative humidity
Power supply	by REINER AC adapter model A30908G, Protection class II
Manufacturer	Ontop European Div. of SAC Group
Mains voltage	230 V ~ / 50 Hz / 70 mA AC
Input voltage for charging station	9 V / 800 mA DC
Noise level	< 60 dB(A) (Workplace related emissions to ISO 7779)

Certifications



Tested safety

jetStamp is manufactured to the safety standards
IEC / EN 60950 - 1



Marking

jetStamp complies with EC directives
2004 / 108 / EG 'Electromagnetic compatibility'



Electro- and electronic appliances are off the point
of domestic waste or residual waste



The used accumulators are off the point of domestic
waste or residual waste

Used or defective accumulators have to be disposed
according to the corresponding ordinances

REINER

Ernst Reiner GmbH & Co. KG

Baumannstr. 16

D - 78120 Furtwangen

Telephone + 49 7723 6570

Fax + 49 7723 657200

E - Mail reiner@reiner.de

Internet www.reiner.de